Quick Guide

ONEPLUS

EN

Button description

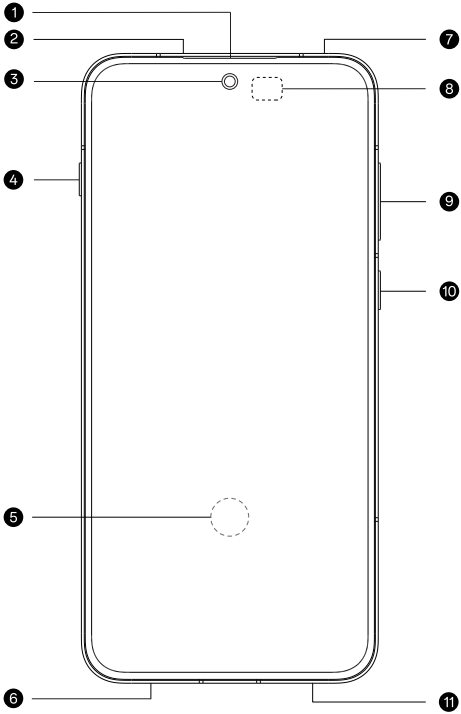

1 Earpiece Speaker
2 Top Speaker
3 Front Camera
4 Plus Key
5 Ultrasonic fingerprint sensor
6 SIM Slot
7 MIC
8 Ambient light/ proximity sensor
9 Volume
10 Power Button
11 Bottom Speaker

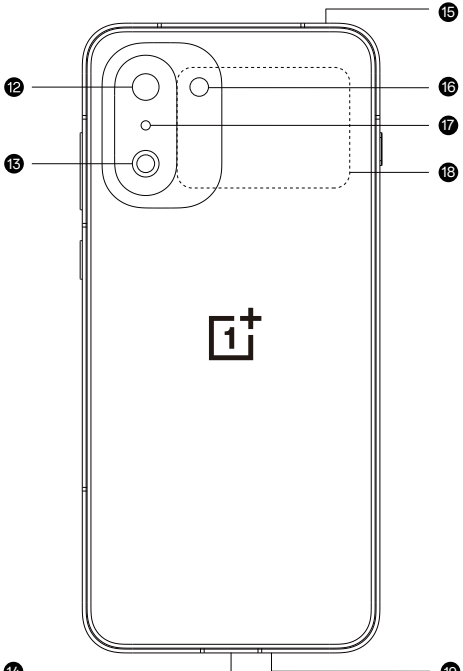

12 Wide-angle Camera

13 Ultra-wide-angle Camera

14 USB Type-C port

15 Air Pressure Equalizing Hole

16 Flashlight

17 Infrared Sensor

18 NFC

19 MIC

FR

Description du bouton

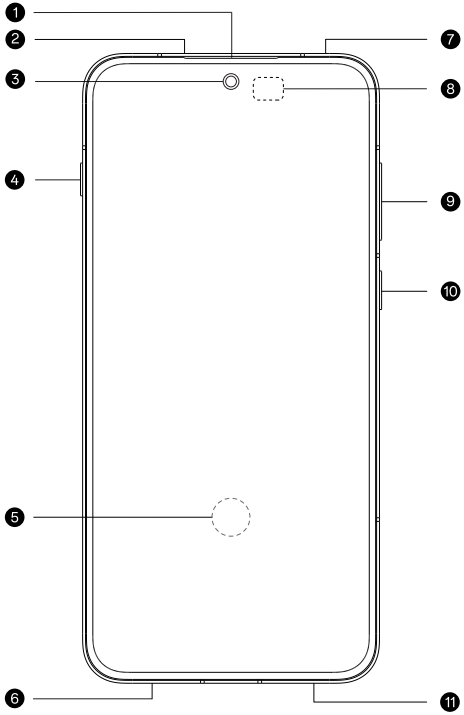

1. Haut-parleur supérieur
2. Haut-parleur
3. Caméra avant
4. Touche Plus
5. Capteur d'empreintes digitales à ultrasons
6. Emplacement carte SIM
7. Micro
8. Capteur de lumière ambiante/de proximité
9. Volume
10. Bouton d'alimentation
11. Haut-parleur inférieur

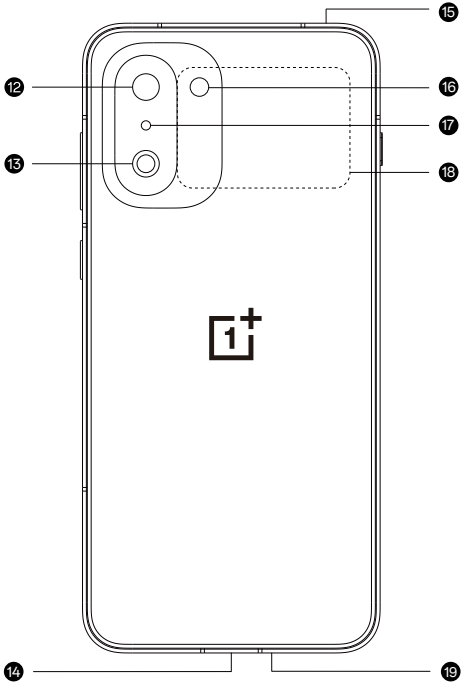

12 Appareil photo grand angle

13 Caméra ultra grand angle

14 Port USB Type C

15 Capteur d'empreintes digitales à ultrasons

16 Lampe torche

17 Capteur infrarouge

18 NFC

19 Micro

This manual is published by OnePlus. OnePlus may correct any misprints, errors, and inaccuracies in the manual or improve its apps and/or devices at any time it deems necessary without any notice. Such changes will be applied in the later versions of this manual. All images in this manual are for reference only and may different from the actual device and UI.

Model: CPH2771 V1.0